



# Changing Purge Time via LINK Software

- Connect serial communications cable to the analyzer and Initiate LINK software
- Select OTHER tab in the Parameters window and change purge time .

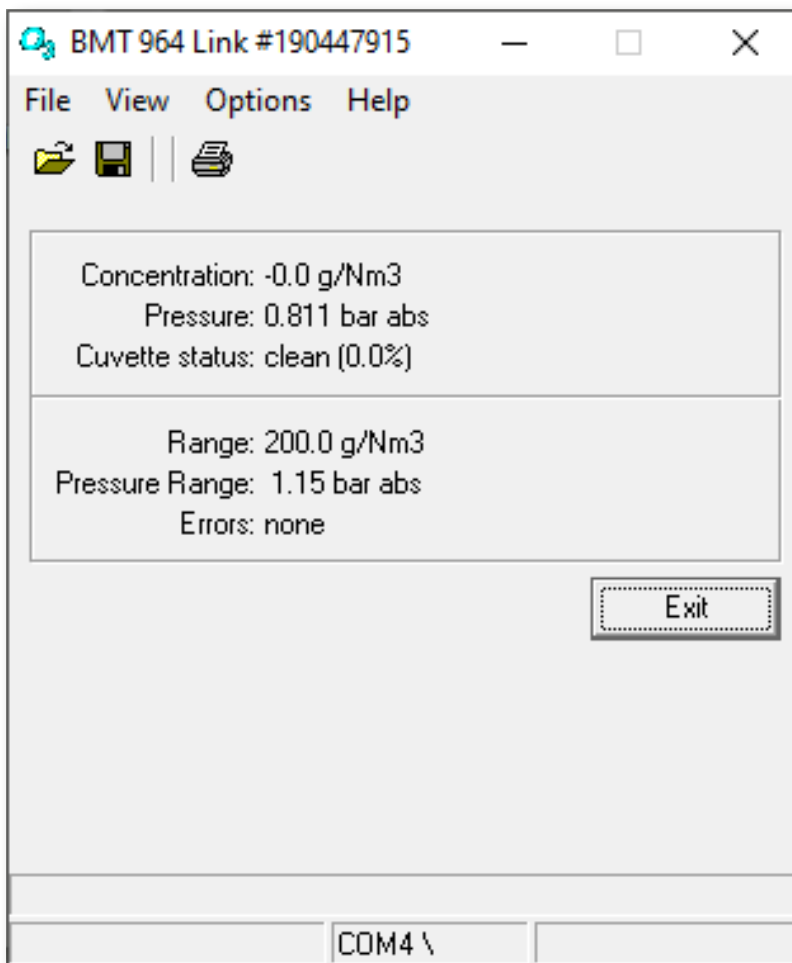

**Main Window**

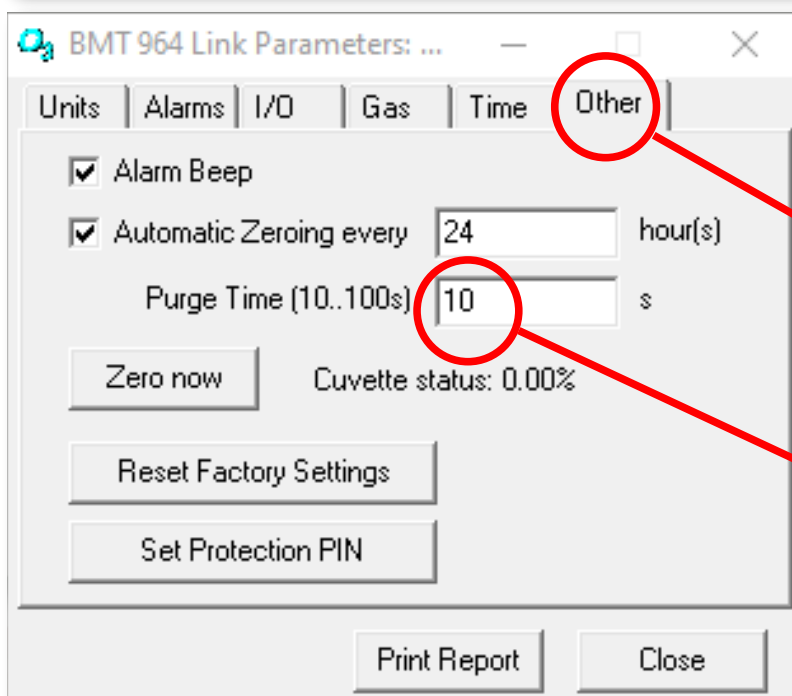

**PARAMETERS Window**

Select **OTHER** Tab

Change to desired number of seconds and press enter.

Note: Set to minimum of 10 seconds (factory default)