



Synchronizing Analyzer Time via LINK Software

- Connect serial communications cable to the analyzer and Initiate LINK software
- Select TIME tab in the Parameters window and click SYNCRONIZE.

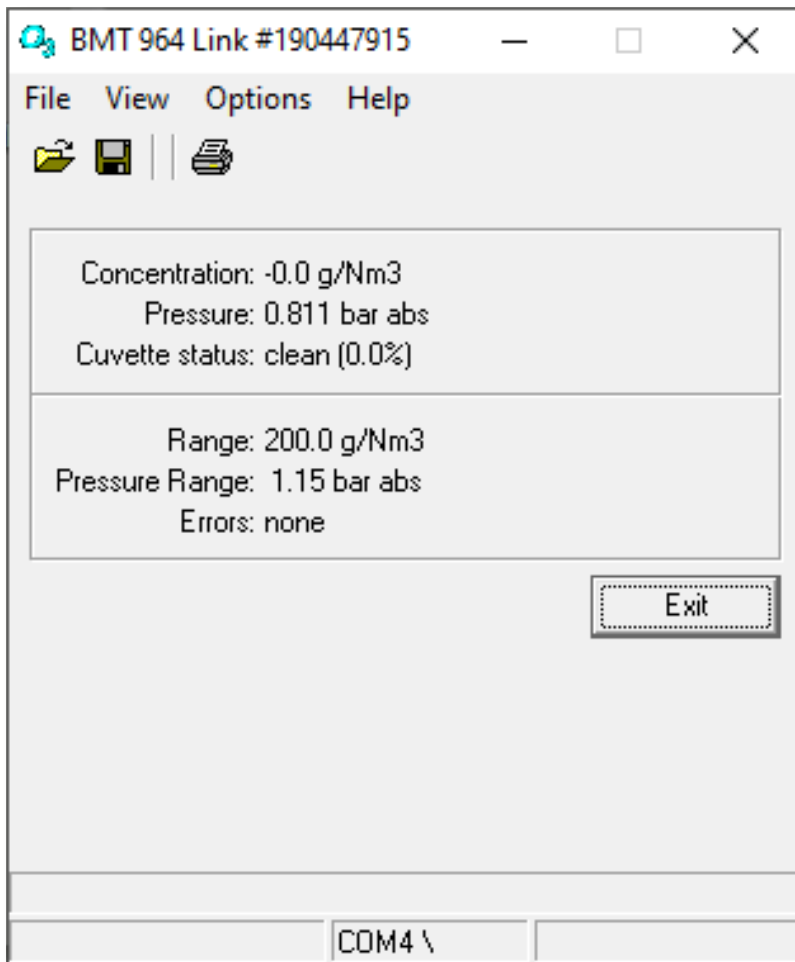

Main Window

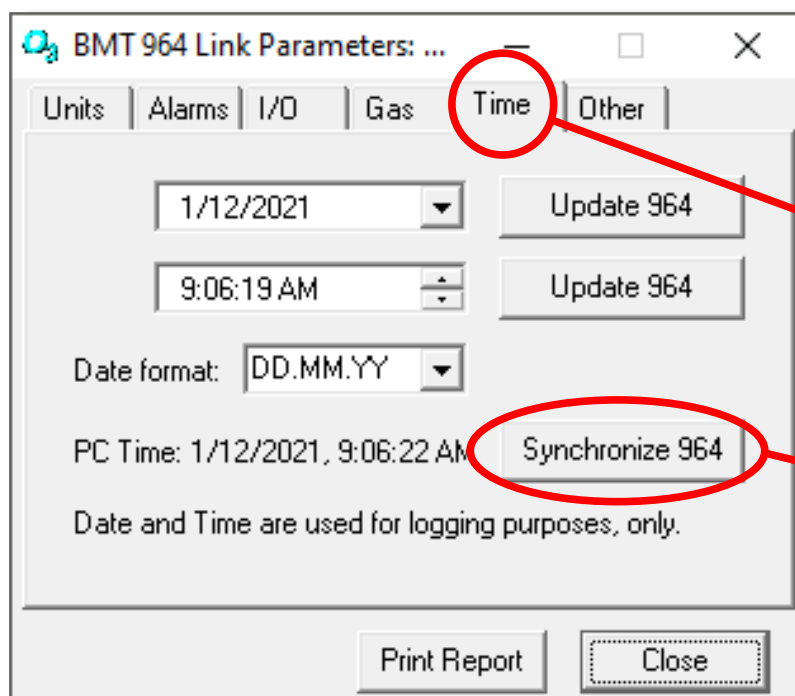

PARAMETERS Window

Select **TIME** Tab

Click **Synchrone**